


# V·TOUCH QUICK START GUIDE

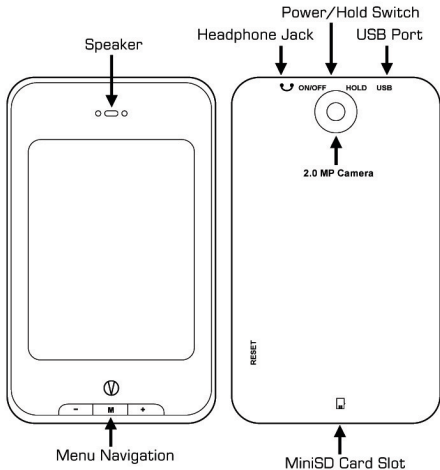

## Charging the Player

You can charge your player either through your computer or with a USB Wall Charger. Plug the player into either using the provided USB cable. Switch your player to the "on" position.

Audio File Formats Supported: MP3, WMA  
Video File Formats Supported: AVI, 3GP, MP4 \*  
\*Other file formats need to be converted using the included conversion software.

## Adding Files to the Player

In order to upload files, you must first make sure that your player is switched on and connected to your computer's USB port. The player should then be recognized as a USB Drive and listed as one of your drives. After you have found your device, you can open it by double clicking the icon. Now you can simply drag your files into the device's open window.

**Power on** your V-Touch by holding the On/Off Switch to right for several seconds. To **adjust the volume**, tap the Speaker icon located in the lower right corner in Music mode or upper right corner in Video mode. The bar at the bottom will turn a brown color. Use the + and - buttons at the bottom of the player to increase or decrease the volume. When finished, tap the Speaker icon once again.

## Video Conversion

In order to be able to play video files, you will need to use the program that is on the player. Once the MP4 Tool program is installed:

1. Run the MP4 Tool program.
2. Go to the "File" menu and select "Open Source".
3. Search for the file you wish to convert and select it.
4. You can change settings for output either through the "Fast Configuration" drop down box or under the "Configurations" menu. We advise you keep the default settings if you do not know what these options are.
5. Once you are satisfied with the settings, go to the "File" menu and choose "Select Target". Choose the directory you want to save the converted file to as well as the output file name.
6. Finally, click the "Convert" button.

Should the V-Touch become unresponsive to touch, try resetting the player using the reset button. Should the problem persist, use the Menu/Navigation buttons to move through the menu options to the "Calibrate" function. Select it and you should be able to recalibrate your touch screen.

The V-Touch Player uses a directory structure for initial scan of usable files. Each mode goes to an appropriate default folder for its initial scan of playable files. Video files should be placed in the "VIDEO" folder: Audio files should be placed in the "AUDIO" folder: Image files should be placed in the "IMAGE" folder: If they are not placed in the appropriate folders, you will need to search through the player's directories to find them.