



POWER

1. To power on, slide the power switch at the bottom to the right, then hold the Power button on the upper left for 2-3 seconds.
2. To power off, push the power button down for 2-3 seconds or slide the power switch at the bottom to the left.

NAVIGATION

1. Use the Forward/Back or Volume Up/Down buttons to navigate the options.
2. Select an option using the Menu button.

CHARGING

1. The player will automatically enter into Stand-by Mode when the battery level is low.
2. The player may be charged through a standard USB wall charger or through your computer via USB cable. The battery indicator will flash, showing the player is charging.

FILE SUPPORT

1. VIDEO [Actual Screen Resolution: 320x240, 128kbps, 25fps / Supported Resolution: 800x600]: AVI, MPG, FLV, RM, RMVB, MP4, 3GP
2. AUDIO: MP3, WMA, FLAC, OGG
3. IMAGE [1800x1800 max resolution]: JPG, BMP, GIF (animated)
4. TEXT: TXT

CONNECTING

1. Your V-Sport works like a USB Flash Drive when connected to the computer. It will be detected as an external drive.
2. To copy files over, simply drag and drop files into the player's appropriate folders.
3. For the full user's manual, connect your player to the computer and open the drive folder. The user manual is in Adobe Acrobat PDF format: [vsport_manual.pdf](#).